

NEC

WEEE report

COLOR MONITOR

MultiSync E224FL

MultiSync E244FL

MultiSync E274FL



DISASSEMBLY

- Before you disassemble the set, turn off power and pull out the power plug.
- Use the proper screwdriver. If oversize or undersize screwdriver is used, screws may be damaged.
- Assembly is reversed process of disassembly.

1 Remove stand


- Unscrew screws marking below and remove stand



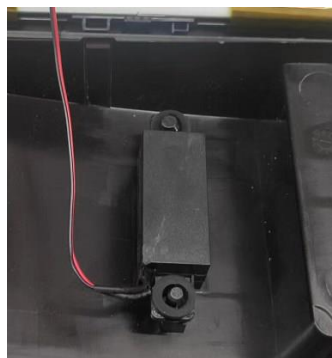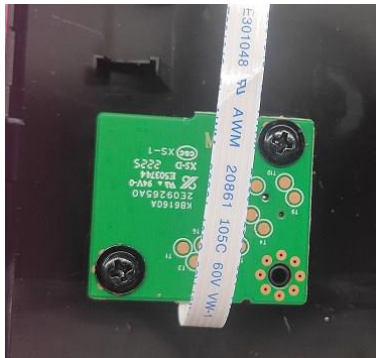


2 Remove iron cover & wire


- Unscrew screws marking below and remove cover

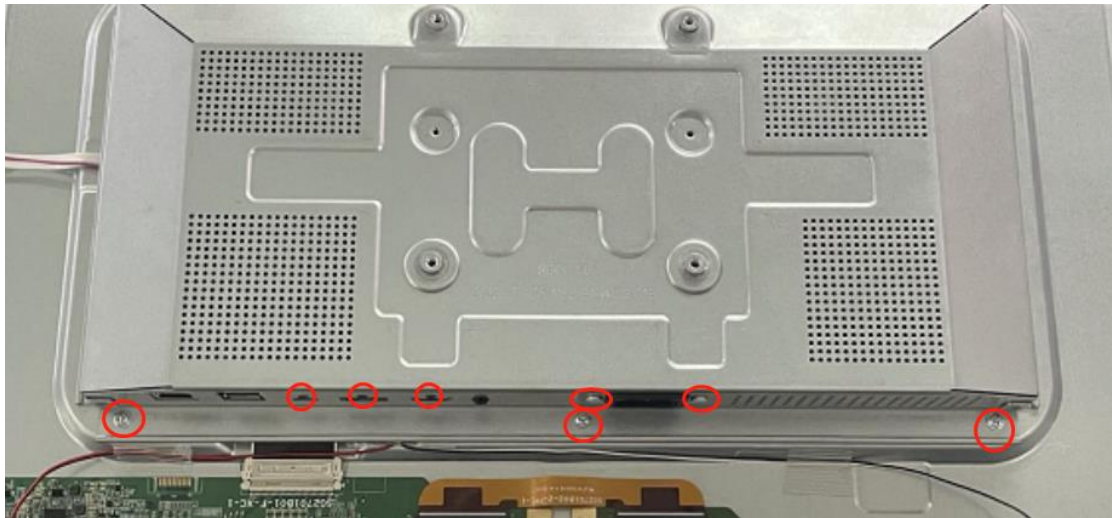


- Unlock the wires

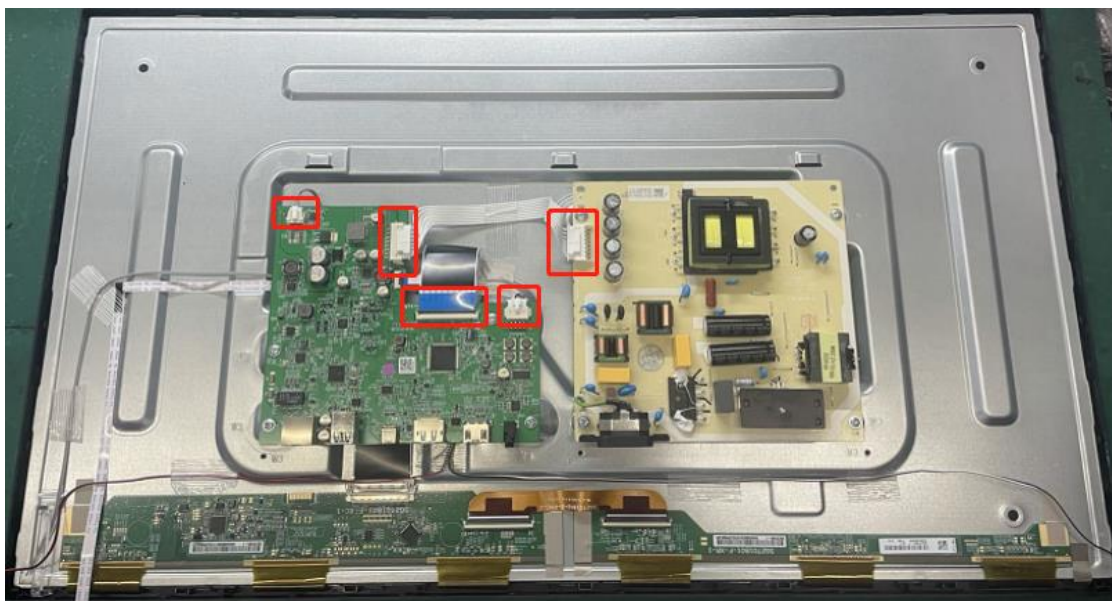


3 Remove the screws from the motherboard and power board

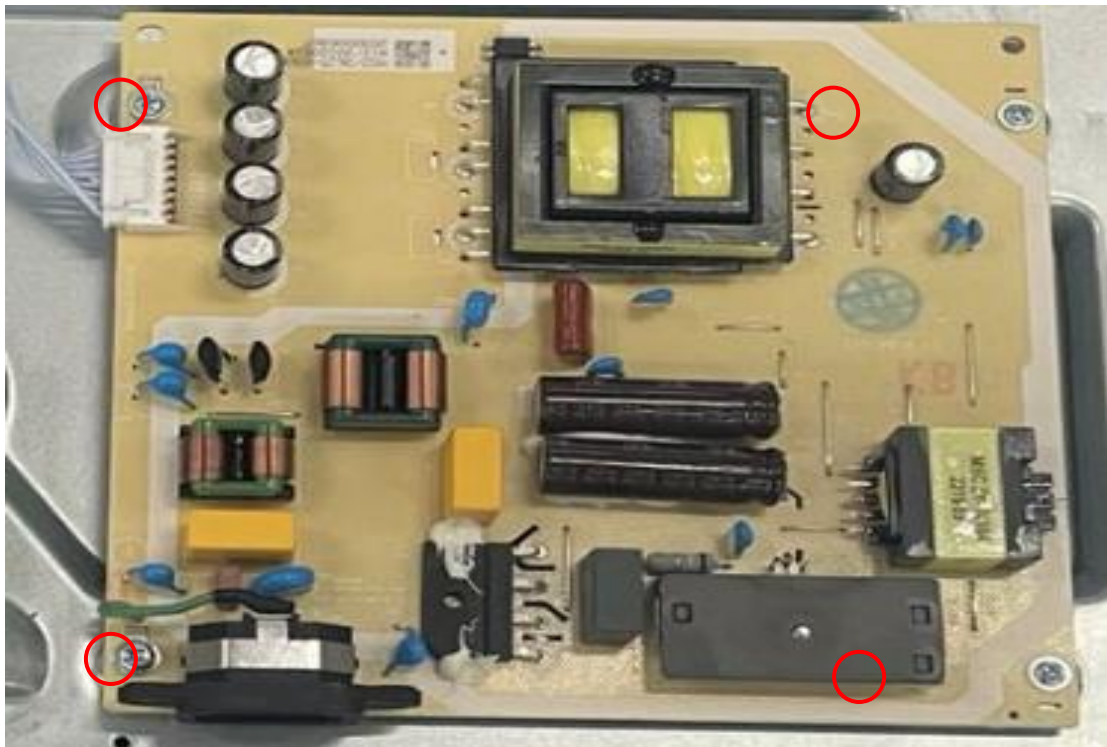


4 Tear off all the tape in the machine

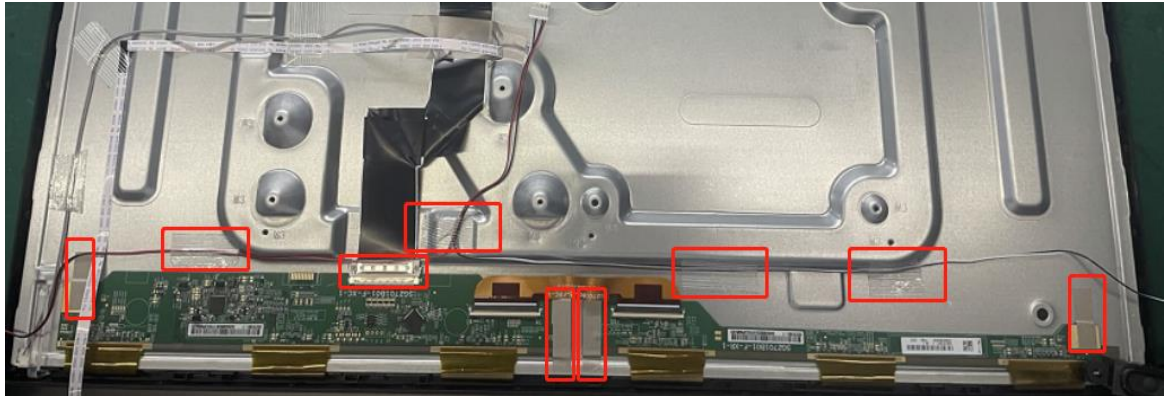

5 Missing lower panel

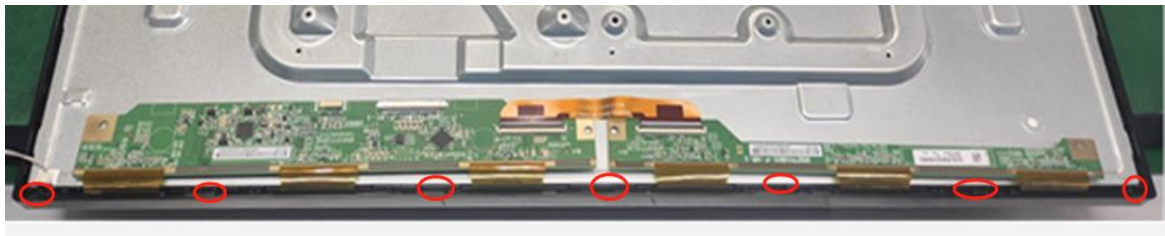

6 Lift the source plate by hand or with a tool to separate the source plate from the hardware back plate

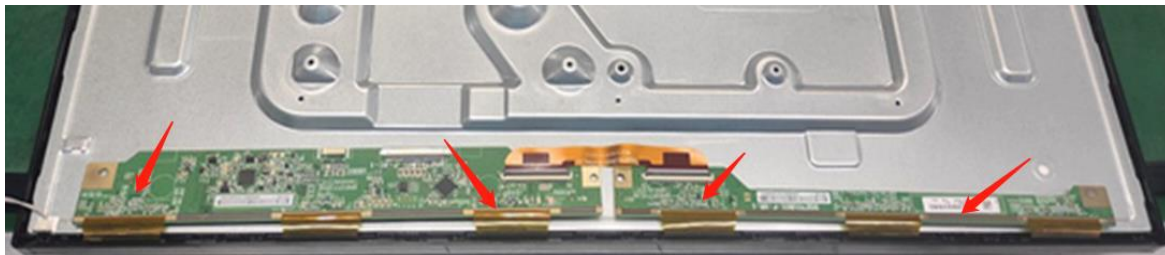

7 Use a tool to separate the OC from the front frame, and use a suction cup to remove the OC



8 Take the front frame out of the buckle



9 Take out the diaphragm, the light guide plate and the reflector in turn



10 Scrape off the rubber strip with a blade and take it out



11 Special handling part:

Item	Part name	Quantity	WEEE Annex VII materials and components
A	Power board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²
B	Main board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²
C	Panel	1	Liquid crystal displays of a surface greater than 100cm ² and all those back-lighted with gas discharge lamps

12 Package:

