



Declaration of the Importer

We hereby certify that the colour monitors
MultiSync LCD1810 (LA-1831JMW)

are in compliance with

Council Directive 73/23/EEC:

- EN 60950

Council Directive 89/336/EEC:

- EN 55022

- EN 61000-3-2

- EN 61000-3-3

- EN 50082-1

(IEC 801-2)

(IEC 801-3)

(IEC 801-4)

and marked with



NEC Europe Ltd. Ismaning Office
Steinheilstraße 4-6

D-85737 Ismaning, Germany





Safety Instruction



WARNING



TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. ALSO, DO NOT USE THIS UNIT'S POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLETS UNLESS THE PRONGS CAN BE FULLY INSERTED.
REFRAIN FROM OPENING THE CABINET AS THERE ARE HIGH VOLTAGE COMPONENTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



CAUTION



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, MAKE SURE POWER CORD IS UNPLUGGED FROM WALL SOCKET. TO FULLY DISENGAGE THE POWER TO THE UNIT, PLEASE DISCONNECT THE POWER CORD FROM THE AC OUTLET. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol warns user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

Caution:

When operating the LA-1831JMW with a 220-240V AC power source in Europe except UK, use the power cord provided with the monitor.

In UK, a BS approved power cord with moulded plug has a Black (five Amps) fuse installed for use with this equipment. If a power cord is not supplied with this equipment please contact your supplier.

When operating the LA-1831JMW with a 220-240V AC Power source in Australia, use the power cord provided with the monitor.

For all other cases, use a power cord that matches the AC voltage of the power outlet and has been approved by and complies with the safety standard of your particular country.

IBM PC/XT/AT, PS/2, MCGA, VGA, 8514/A and XGA are registered trademarks of International Business Machines Corporation.

Apple and Macintosh are registered trademarks of Apple Computer Inc.

Microsoft and Windows are registered trademarks of the Microsoft Corporation.

NEC is a registered trademark of NEC Corporation. ErgoDesign, IPM, OSM and ColorControl are trademarks of NEC Home Electronics, Ltd.

MultiSync is a registered trademark of NEC Technologies, Inc in U.S., and of NEC Home Electronics, Ltd in Canada, U.K., Germany, France, Spain, Italy, Austria, Benelux, Switzerland, Denmark, Finland, Norway and Saudi Arabia.

All other trademarks or registered trademarks are property of their respective owners.





For the Customer to use in U.S.A or Canada.

Canadian Department of Communications Compliance Statement

DOC: This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouiller du Canada.

C-UL: Bears the C-UL Mark and is in compliance with Canadian Safety Regulations according to C.S.A. C22.2 #950.

Ce produit porte la marque 'C-UL' et se conforme aux règlements de sûreté Canadiens selon CAN/CSA C22.2 No. 950.

FCC Information

1. Need to use the attached specified cables below with the LA-1831JMW colour monitor so as not to interfere with radio and television reception.

- (1) The power supply cord you use must have been approved by and comply with the safety standards of U.S.A., and meet the following condition.

Power supply cord	Non shield type, 3-conductor
Length	1.8m
Plug shape	

- (2) Please use the supplied AC Adapter.
 - (3) Shielded video signal cable.
Use of other cables and adapters may cause interference with radio and television reception.
2. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which



can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

If necessary, the user should contact the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet, prepared by the Federal Communications Commission, helpful: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C., 20402, Stock No. 004-000-00345-4.

DECLARATION OF CONFORMITY

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

U.S. Responsible Party:	NEC Technologies, Inc.
Address:	1250 North Arlington Heights Road
	Itasca, Illinois 60143-1248
Tel.No.:	(630) 467-5000

Type of Product: Computer Monitor
Equipment Classification: Class B Peripheral
Model: LA-1831JMW

 


We hereby declare that the equipment specified above conforms to the technical standards as specified in the FCC Rules.



TCO'99

Congratulations! You have just purchased a TCO'99 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and also to the further development of environmentally adapted electronics products.

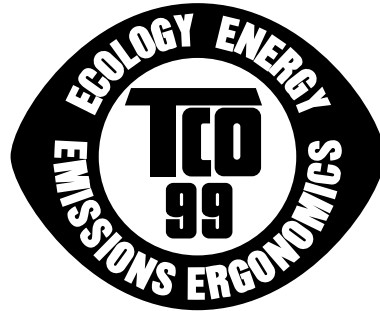

Why do we have environmentally labelled computers?

In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem, as far as computers and other electronics equipment are concerned, is that environmentally harmful substances are used both in the products and during their manufacture. Since it is not so far possible to satisfactorily recycle the majority of electronics equipment, most of these potentially damaging substances sooner or later enter nature.

There are also other characteristics of a computer, such as energy consumption levels, that are important from the viewpoints of both the work (internal) and natural (external) environments. Since all methods of electricity generation have a negative effect on the environment (e.g. acidic and climate-influencing emissions, radioactive waste), it is vital to save energy. Electronics equipment in offices is often left running continuously and thereby consumes a lot of energy.

What does labelling involve?

This product meets the requirements for the TCO'99 scheme which provides for international and environmental labelling of personal computers. The labelling scheme was developed as a joint effort by the TCO (The Swedish Confederation of Professional Employees),



Svenska Naturskyddsforeningen (The Swedish Society for Nature Conservation) and Statens Energimyndighet (The Swedish National Energy Administration).

Approval requirements cover a wide range of issues: environment, ergonomics, usability, emission of electric and magnetic fields, energy consumption and electrical and fire safety.

The environmental demands impose restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs (freons) and chlorinated solvents, among other things. The product must be prepared for recycling and the manufacturer is obliged to have an environmental policy which must be adhered to in each country where the company implements its operational policy.

The energy requirements include a demand that the computer and/or display, after a certain period of inactivity, shall reduce its power consumption to a lower level in one or more stages. The length of time to reactivate the computer shall be reasonable for the user.

Labelled products must meet strict environmental demands, for example, in respect of the reduction of electric and magnetic fields, physical and visual ergonomics and good usability.

Below you will find a brief summary of the environmental requirements met by this product. The complete environmental criteria document may be ordered from:

TCO Development

SE-114 94 Stockholm,
Sweden

Fax: +46 8 782 92 07

Email (Internet): development@tco.se

Current information regarding TCO'99 approved and labelled products may also be obtained via the Internet, using the address:

<http://www.tco-info.com/>



Environmental requirements

Flame retardants

Flame retardants are present in printed circuit boards, cables, wires, casings and housings. Their purpose is to prevent, or at least to delay the spread of fire. Up to 30% of the plastic in a computer casing can consist of flame retardant substances. Most flame retardants contain bromine or chloride, and those flame retardants are chemically related to another group of environmental toxins, PCBs. Both the flame retardants containing bromine or chloride and the PCBs are suspected of giving rise to severe health effects, including reproductive damage in fish-eating birds and mammals, due to the bio-accumulative* processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

The relevant TCO'99 demand requires that plastic components weighing more than 25 grams must not contain flame retardants with organically bound bromine or chlorine. Flame retardants are allowed in the printed circuit boards since no substitutes are available.

Cadmium**

Cadmium is present in rechargeable batteries and in the colour-generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses.

The relevant TCO'99 requirement states that batteries, the colour-generating layers of display screens and the electrical or electronics components must not contain any cadmium.

Mercury**

Mercury is sometimes found in batteries, relays and switches. It damages the nervous system and is toxic in high doses.

The relevant TCO'99 requirement states that batteries may not contain any mercury. It also demands that mercury is not present in any of the electrical or electronics components associated with the labelled unit.



CFCs (freons)

The relevant TCO'99 requirement states that neither CFCs nor HCFCs may be used during the manufacture and assembly of the product. CFCs (freons) are sometimes used for washing printed circuit boards. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on earth of ultraviolet light with e.g. increased risks of skin cancer (malignant melanoma) as a consequence.

Lead**

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning.

The relevant TCO'99 requirement permits the inclusion of lead since no replacement has yet been developed.



* Bio-accumulative is defined as substances which accumulate within living organisms

** Lead, Cadmium and Mercury are heavy metals which are Bio-accumulative.





English

Deutsch

Français

Español

Italiano

Appendix





English







Introduction to the NEC MultiSync LCD1810

Congratulations on your purchase of the NEC MultiSync LCD1810 true colour monitor!

NuCycle Plastic

A special silicone compound for PC resin, being extremely flame-retardant, safe and environmentally friendly.



Wide Viewing Angle Technology

Allows the user to be able to see the monitor from any angle (160 degrees) from any orientation - Portrait or Landscape. Provides full 160° viewing angles either up, down, left or right.

Analog Advantage

Capable of displaying unlimited colors in a continuous spectrum, providing a truer representation of color. The monitor's high contrast LCD enhances color vibrancy and improves focus with no geometric distortion.

Wider Compatibility

Because the MultiSync LCD monitor is analog through and through, it does not require special analog to digital display or interface cards but can accept RGB input directly.

Reduced Footprint

Provides the ideal solution for environments requiring superior image quality but with size and weight limitations. The monitor's small footprint and low weight allow it to be moved or transported easily from one location to another.

Colour Control System

Allows you to adjust the colors on your screen and customize the color accuracy of your monitor to a variety of standards.



OSM (On-Screen Manager) Controls

Allow you to quickly and easily adjust all elements of your screen image via simple to use on-screen menus.

ErgoDesign Features

Enhance human ergonomics to improve the working environment, protect the health of the user and save money. Examples include OSM controls for quick and easy image adjustments, tilt/swivel pivot stand for preferred angle of viewing, small footprint and compliance with MPRII guidelines for lower emissions.

Pivoting Stand

Allows users to adjust the monitor to the orientation that best fits their application, either Landscape orientation for wide documents, or portrait orientation for the ability to preview a full page on one screen at one time. The Portrait orientation is also perfect for full screen video conferencing.

Plug and Play

The Microsoft® solution with the Windows® operating system facilitates setup and installation by allowing the monitor to send its capabilities (such as screen size and resolutions supported) directly to your computer, automatically optimizing display performance.

IPM (Intelligent Power Manager) System

Provides innovative power-saving methods that allow the monitor to shift to a lower power consumption level when on but not in use, saving two-thirds of your monitor energy costs, reducing emissions and lowering the air conditioning costs of the workplace.

Multiple Frequency Technology

Automatically adjusts monitor to the display card's scanning frequency, thus displaying the resolution required.



FullScan Capability

Allows you to use the entire screen area in most resolutions, significantly expanding image size.

VESA Standard Mounting Interface

Allows users to connect their MultiSync monitor to any VESA standard third party mounting arm or bracket. Allows for the monitor to be mounted on a wall or an arm using any third party compliant device.



BNC/D-SUB

 
The MultiSync LCD1810 also offers dual inputs, allowing you to connect the monitor to one system via a BNC cable and a another system via a standard D-Sub cable. You can easily switch between computers with a touch of a button on the LCD1810 up-front control panel.






Contents

Your new NEC MultiSync LCD monitor box should contain the following:

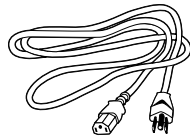

Power Cord

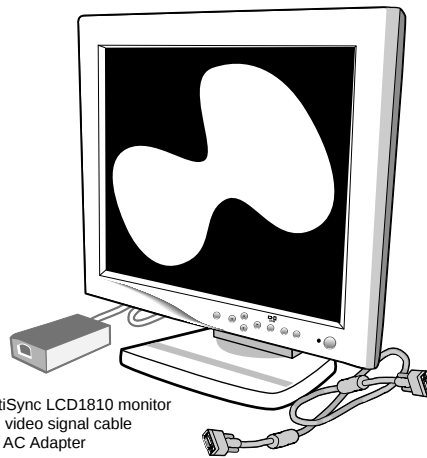 

MultiSync LCD1810 monitor
with video signal cable
and AC Adapter

- NEC MultiSync LCD1810 (Model LA-1831JMW).
- AC Power Cable.
- AC Adapter.
- Video Signal Cable
(15-pin mini D-SUB male to
15-pin mini D-SUB male).
- User's Manual.

Remember to save your original box and packing material to transport or ship the monitor.



Recommended Use

Safety Precautions and Maintenance

For optimum performance, please note the following when setting up and using the MultiSync LCD color monitor:

- DO NOT OPEN THE MONITOR. There are no user serviceable parts inside and opening or removing covers may expose you to dangerous shock hazards or other risks. Refer all servicing to qualified service personnel.
- Allow adequate ventilation around the monitor so that heat can properly dissipate. Do not block ventilated openings or place the monitor near a radiator or other heat sources. Do not put anything on top of monitor.
- Do not spill any liquids into the cabinet or use your monitor near water.
- Do not insert objects of any kind into the cabinet slots, as they may touch dangerous voltage points, which can be harmful or fatal or may cause electric shock, fire or equipment failure.
- Do not place any heavy objects on the power cord. Damage to the cord may cause shock or fire.
- Do not place this product on a sloping or unstable cart, stand or table, as the monitor may fall, causing serious damage to the monitor.
- The power cable connector is the primary means of detaching the system from the power supply. The monitor should be installed close to a power outlet that is easily accessible.
- When operating the MultiSync LCD monitor with its AC220-240V worldwide power supply, use a power supply cord that matches the power supply voltage of the AC power outlet being used. The power supply cord you use must have been approved by and comply with the safety standards of your country.
- Use supplied AC Adapter.



- Handle with care when transporting. Save packaging for transporting.
- The inside of the fluorescent tube located within the LCD monitor contains mercury. Please follow the bylaws or rules of your local municipality to dispose of this tube properly.

Immediately unplug your monitor from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the monitor.
- If the monitor has been exposed to rain or water.
- If the monitor has been dropped or the cabinet is damaged.



CORRECT PLACEMENT AND ADJUSTMENT OF THE MONITOR CAN REDUCE EYE, SHOULDER AND NECK FATIGUE. CHECK THE FOLLOWING WHEN YOU POSITION THE MONITOR:

- For optimum performance, allow 20 minutes for warm-up.
- Adjust the monitor height so that the top of the screen is at or slightly below eye level. Your eyes should look slightly downward when viewing the middle of the screen.
- Position your monitor no closer than 40 cm and no further away than 70 cm from your eyes. The optimal distance is 53 cm for the MultiSync LCD1810 monitor.
- Rest your eyes periodically by focusing on an object at least 20 feet away. Blink often.
- Position the monitor at a 90° angle to windows and other light sources to minimize glare and reflections. Adjust the monitor tilt so that ceiling lights do not reflect on your screen.
- If reflected light makes it hard for you to see your screen, use an anti-glare filter.
- Clean the LCD monitor surface with a lint-free, non-abrasive cloth. Avoid using any cleaning solution or glass cleaner!
- Adjust the monitor's brightness and contrast controls to enhance readability.
- Use a document holder placed close to the screen.
- Position whatever you are looking at most of the time (the screen or reference material) directly in front of you to minimize turning your head while you are typing.
- Avoid displaying fixed patterns on the monitor for long periods of time to avoid image persistence (after-image effects).
- Get regular eye checkups.



Installation

To attach the MultiSync LCD1810 monitor to your system, follow these instructions:

1. Turn off the power to your computer.
If you are using the supplied video signal cable, continue to step 2.
If you are using a BNC cable (not included), please skip to Step 3.

NOTE: BNC cables may be purchased at your local electronics store.

2. **For the PC:** Connect one end of the video signal cable to the back of the monitor (Figure A.1) and the other end to the connector of the display card in your system (Figure A.2). Tighten all screws.

For the Mac: Attach one end of the video signal cable to the back of the monitor (Figure B.1) Connect the Macintosh cable adapter to the computer and the other end of the Video signal cable to the Macintosh cable adapter (Figure B.2). Tighten all screws. Proceed to step 4.

3. Connect the BNC cable to the appropriate connectors on the back of the monitor. Connect the red BNC cable to the BNC connector on the monitor labeled R, the green BNC cable to the BNC connector labeled G (/SYNC), the blue BNC cable to the BNC connector labeled B. If you require a fourth BNC connector (Composite Sync), connect it to the BNC connector on the monitor labeled HS/CS. If you require a fifth BNC connector (Vertical Sync), connect it to the BNC connector on the monitor labeled VS (Figure C.1). Connect the other end to the computer. For a PC refer to (Figure A.2). For a Macintosh refer to (Figure B.2).

NOTE: Incorrect cable connections may result in irregular operation or damage display components.

4. Connect the AC Adapter cord to the monitor (Figure D.1).
5. Connect one end of the power cord to the AC adapter and the other end to the power outlet (Figure E.1).



6. Turn on the monitor (Figure F.1) and the computer.
7. To complete the setup of your MultiSync® LCD monitor:
 - A. Set the resolution to 1280 x1024@60 Hz.
 - B. Use the following OSM™ controls:
 - Auto Adjust Contrast
 - Auto Adjust

NOTE: Manual adjustment of the H/V Position and Image Adjust H.Size/ Fine controls may be required to complete setup of your MultiSync monitor. For a full description of there OSM controls, refer to the Controls section of this User's Manual.

NOTE: If you have any problems, please refer to the Troubleshooting section of this User's Manual.

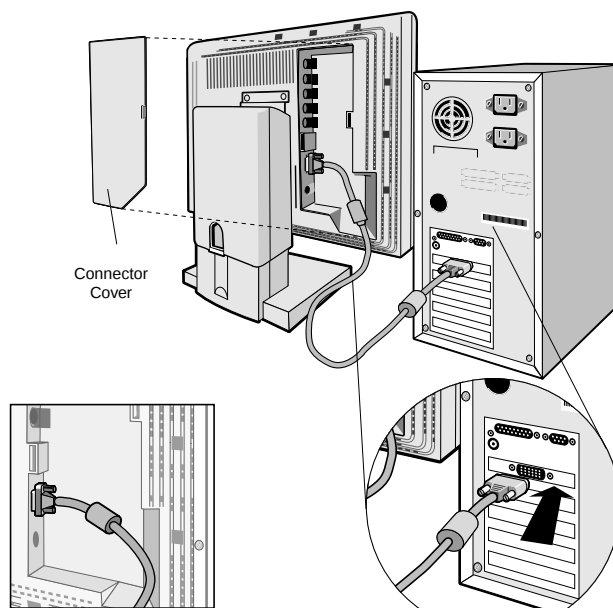 


Figure A.1

Figure A.2

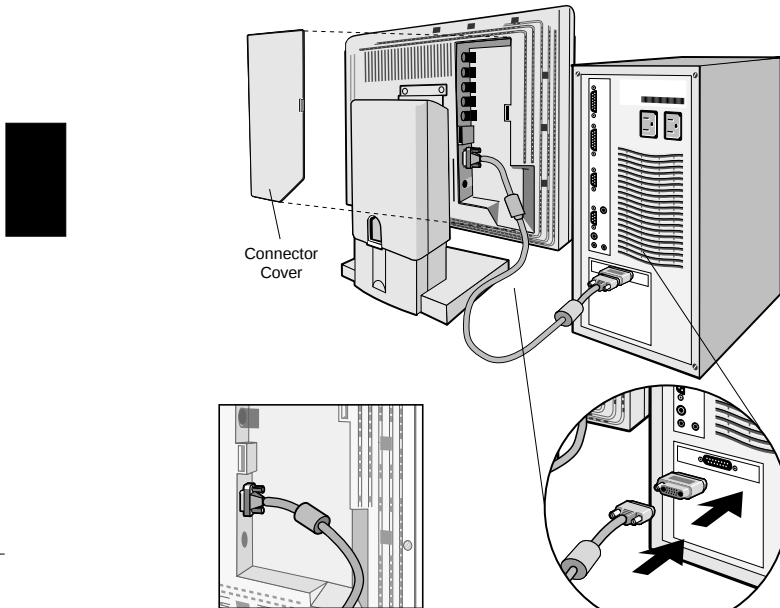 


Figure B.1

Figure B.2

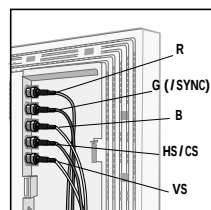 


Figure C.1

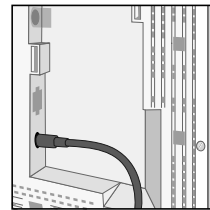 


Figure D.1

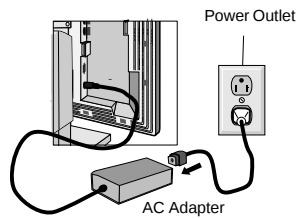 


Figure E.1

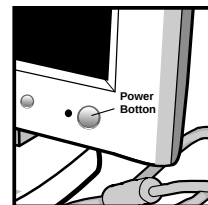 


Figure F.1



Cable Management

To use the cable management feature, lift up then remove back cover (Figure CM.1). Place all cables into the vertical groove, leaving 6" of slack in the cables to allow the monitor to rotate between Landscape and Portrait orientation (Figure CM.2). To replace back cover, push in then slide down (Figure CM.3).

Supplied Video Signal Configurations

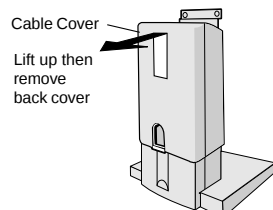 


Figure CM.1

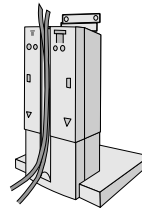 


Figure CM.2



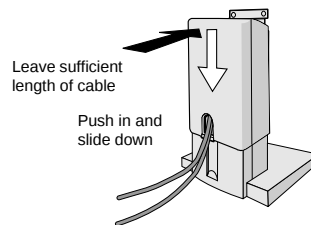 


Figure CM.3

 


Option 1.
Stand or Arm Mount

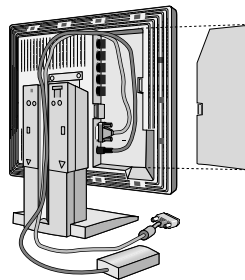 


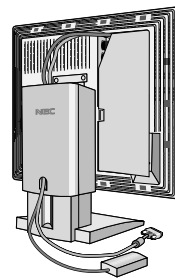

 
Supplied Video Signal Cable Configurations (cont.)

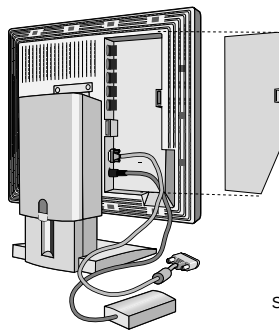



Option 2
Stand or Wall Mount

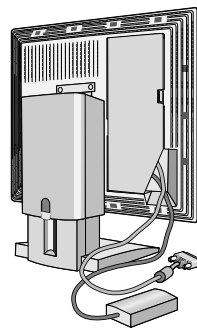 

 
Optional BNC Configurations (BNC cable not supplied)

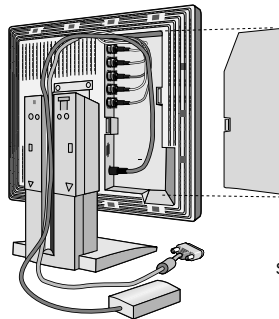

Option 3
Stand or Arm Mount

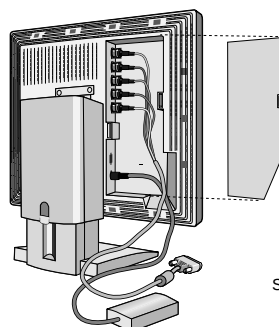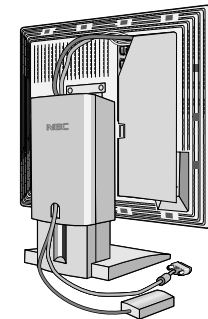  

Option 4
Stand or Wall Mount

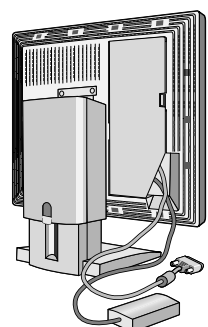 



Raise and Lower Monitor Screen

The monitor may be raised or lowered in either Portrait or Landscape mode. To raise or lower screen, place one hand under bottom of screen (Figure RL.1), lift or lower slightly and simultaneously push the button on the bottom back of the stand (Figure RL.2). Screen will lower while button is pushed in. Release button to lock screen in place.

CAUTION: Although the monitor has been designed not to lower automatically when the button is pushed, ALWAYS support the bottom of the screen with one hand.

Screen Rotation

Before rotating, the screen must be raised to the highest level to avoid knocking the screen on the desk or pinching your fingers.

To raise the screen, place one hand under bottom of screen (Figure RL.1), lift up and simultaneously push the button on the bottom back of the stand (Figure RL.2).

To rotate screen, place hands on each side of the monitor screen and turn clockwise from Landscape to Portrait or counter-clockwise from Portrait to Landscape (Figure R.1).

To toggle the orientation of the OSM menu between Landscape and Portrait modes, press the RESET button while OSM menu is off.

Tilt and Swivel

Grasp both sides of the monitor screen with your hands and adjust the tilt and swivel as desired (Figure TS.1).



Figure RL.1

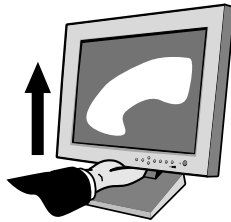 


Figure RL.2



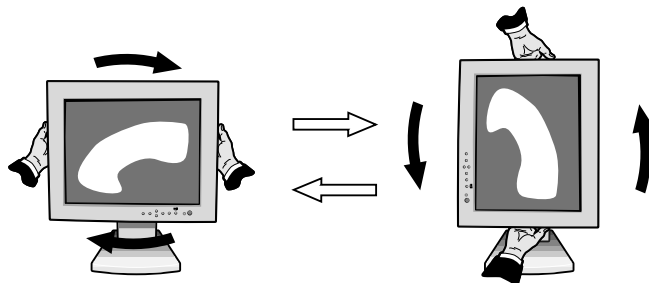 


Figure R.1

  Figure TS.1

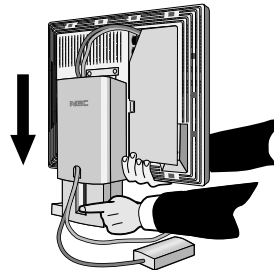

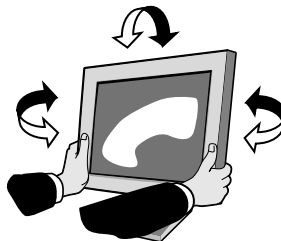

Remove Monitor Stand for Mounting

To prepare the monitor for alternate mounting purposes:

1. Disconnect all cables.
2. Place one hands under bottom of screen(Figure RL.1), lift up and simultaneously push the button on the bottom back of the stand to the maximum height (Figure RL.2).
3. Place monitor face down on a non-abrasive surface. (Place the screen on a 55 mm platform so that the stand is parallel with the surface.) (Figure S.1)



Figure S.1

4. Remove cable cover. Remove the 4 screws connecting the monitor to the stand and lift off the stand assembly (Figure S.2). The monitor is now ready for mounting in an alternate manner.
5. Reverse this process to reattach stand.

NOTE: Use only VESA-compatible alternative mounting method.


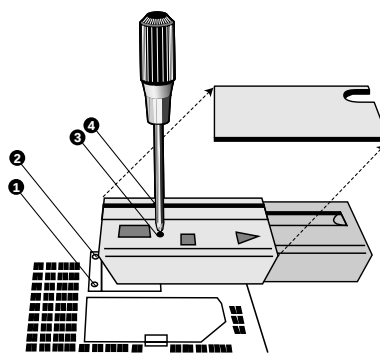 


Figure S.2

 

Controls

OSM Controls

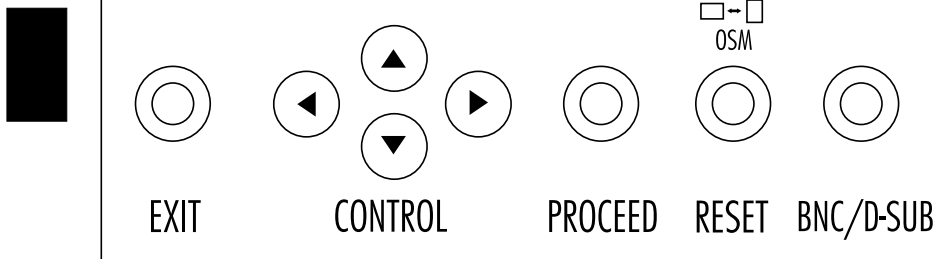

BNC/D-SUB: Allows the connection of the monitor to one system using a BNC cable; and another system using a standard D-SUB cable.

The OSM controls on the front of the monitor provide the following functions:

To access OSM press any of the control buttons (◀, ▶, ▲, ▼) or the PROCEED or EXIT button.
To rotate OSM between Landscape and Portrait modes, press the RESET button.
NOTE: OSM menu must be closed in order to rotate.

	Main Menu	Sub-Menu
EXIT	Exits the OSM controls.	Exits to the OSM main menu.
CONTROL ▲/▼	Moves the highlighted area up/down to select one of the controls	Moves the highlighted area up/down to select one of the controls
CONTROL ◀/▶	Moves the highlighted area left / rights to select control menus.	Moves the bar left / right to increase or decrease the adjustment.
PROCEED	Has no function.	Activates Auto Adjust and ALL RESET functions.
RESET	Resets the highlighted control menu to the factory setting.	Resets the highlighted control to the factory setting.

NOTE: When RESET is pressed in the main and sub-menu, a warning window will appear allowing you to cancel the RESET function by pressing the EXIT button.



Brightness/Contrast Controls



BRIGHTNESS

Adjusts the overall image and background screen brightness.



CONTRAST

Adjusts the image brightness in relation to the background.

AUTO

AUTO ADJUST CONTRAST

Adjusts the image displayed for non-standard video inputs.

AUTO **Auto Adjust**

Automatically adjusts the Image Position, the H. Size or Fine settings.

NOTE: Manual adjustment of the H/V Position and Image Adjust H. Size / Fine controls may be required to complete setup of your MultiSync monitor.



Position Controls



H. POSITION

Controls Horizontal Image Position within the display area of the LCD.



V. POSITION

Controls Vertical Image Position within the display area of the LCD.

AUTO

AUTO

Automatically sets the Horizontal and Vertical Image Position within the display area of the LCD.

 **Image Adjust Controls** **H. SIZE**

Adjusts the horizontal size by increasing or decreasing this setting.

 FINE

Improves focus, clarity and image stability by increasing or decreasing this setting.

NOTE: The Image Adjust Fine control must be used to complete the setup of your MultiSync LCD1810 monitor.

AUTO Automatically adjusts the H. Size or Fine settings.

 Colour Control System

Five color presets select the desired color setting. Each color setting is adjusted at the factory.

R,G,B: Increases or decreases Red, Green or Blue color depending upon which is selected. The change in color will appear on screen and the direction (increase or decrease) will be shown by the bars.

 Tools **OSM H POS.** **OSM V POS.**

You can choose where you would like the OSM control window to appear on your screen. Selecting OSM Location allows you to manually adjust the position of the OSM control menu left, right, up or down.

 ALL RESET

Selecting ALL RESET allows you to reset all OSM control settings back to the factory settings. Individual settings can be reset by highlighting the control to be used and pressing the RESET button.



Information

Indicates the current display resolution, frequency setting and type of Sync signal of the monitor.

NOTE: Mode Change should only be used if a resolution is not recognized by the monitor. The user can change to the appropriate resolution by selecting the Mode information and selecting (increase or decrease) the corresponding option.

NOTE: If the  or  button is pressed while TYPE is highlighted, then Sync Type is switched between Separate Sync and Sync On Green.

OSM LOCK OUT

The OSM LOCK OUT control completely locks out access to all OSM control functions. When attempting to activate OSM controls while in the LOCK OUT mode, a screen will appear indicating that OSM controls are locked out.

- To enter the LOCK OUT mode, simultaneously press the PROCEED and  button. The LOCK OUT window will appear.
- To activate the LOCK OUT function, simultaneously press and hold down the PROCEED and  button. The OSM window will disappear within seconds and the LOCK OUT function will be activated.
- To deactivate the LOCK OUT mode, simultaneously press the PROCEED and  button.



Specifications

Display	46 cm (18.1 inch) viewable image size; 1280 x 1024 native resolution (Pixel Count); active matrix; thin film transistor (TFT); liquid crystal display (LCD); 0.28 mm dot pitch; 200 cd/m ² white luminance, typical; 150:1 contrast ratio, typical		
Input Signal	Video	Analog 0.7 Vp-p 75 Ω	
	Sync	Separate sync. TTL Level Horizontal sync. Positive/Negative Vertical sync. Positive/Negative Composite sync. (Positive/Negative) (TTL Level) Sync on Green video (Positive) 0.7 Vp-p and sync. Negative 0.3 Vp-p	
Display Colours	Analog Input:	Unlimited number of colours (Depends on the graphics board)	
Synchronisation Range	Horizontal	24.0 kHz to 80.0 kHz (Automatically)	
	Vertical	56.0 Hz to 76.0 Hz (Automatically)	
Resolutions Supported	Landscape	720 x 400: VGA text* 640 x 480 at 60 Hz to 76 Hz 800 x 600 at 56 Hz to 76 Hz* 832 x 624 at 75 Hz* 1024 x 768 at 60 Hz to 76 Hz* 1280 x 960 at 60 Hz to 76 Hz 1280 x 1024 at 60 Hz to 76 Hz**	
	Portrait	480 x 640: at 60Hz to 76Hz 600x 800 at 56 Hz to 76 Hz* 624 x 832 at 75 Hz* 768 x 1024 at 60 Hz to 76 Hz* 960 x 1280 at 60 Hz to 76 Hz 1024 x 1280 at 60 Hz to 76 Hz**	
Active Display Area***	Landscape	Horizontal	359 mm
		Vertical	287 mm
	Portrait	Horizontal	287 mm
		Vertical	359 mm



Specifications

E - 21

Power supply		AC 100-120 V / 220-240 V @ 50/60 Hz
Current Rating		0.9A @ 100-120V / 0.5A @ 220-240V
Dimensions	Landscape	454(W) x 461(H) x 262(D) mm
	Portrait	382(W) x 497(H) x 262(D) mm
	Height Adjust	70mm
Weight		10.0kg
Operating	Temperature	5° C to + 35° C
Environmental	Humidity	30% to 80%
Considerations		
Storage	Temperature	-10° C to + 60° C
Environmental	Humidity	10% to 85%
Considerations		

* Interpolated Resolutions: when resolutions are shown that are lower than the pixel count of the LCD module, text may appear choppy or lines may appear to be bold. This is normal and necessary for all current flat panel technologies, each dot on the screen is actually one pixel, so to expand resolutions to full screen, an interpolation of the resolution must be done. When the interpolated resolutions is not an exact multiple of the native resolution, the mathematical interpolation necessary may cause some lines to appear thicker than others.

** NEC cites recommended resolutions at 60 Hz for optimal display performance.

*** Active display area is dependent upon the signal timing.

Technical specifications are subject to change without notice.



Troubleshooting/Support

Problem	Check These Items
No picture	- The signal cable should be completely connected to the display card/computer. - The display card should be completely seated in its slot. - Power button and computer power switch should be in the ON position. - Check to make sure that a supported mode has been selected on the display card or system being used. (Please consult display card or system manual to change graphics mode.) - Check the monitor and your display card with respect to compatibility and recommended settings. - Check the signal cable connector for bent or pushed-in pins. - Check the input cable of D-SUB or BNC, select switch is in correct position.
Power Button does not respond	Unplug the power cord of the monitor from the AC outlet to turn off and reset the monitor, or simultaneously press the RESET and Power buttons.
Image persistence	Image persistence is when a “ghost” of an image remains on the screen even after the monitor has been turned off. Unlike CRT monitors, LCD monitors’ image persistence is not permanent. To alleviate image persistence, turn the monitor off for as long as an image was displayed. If an image was on the monitor for one hour and a “ghost” of that image remains, the monitor should be turned off for one hour to erase the image. NOTE: As with all personal display devices, NEC recommends using a screen saver at regular intervals whenever the screen is idle.



Problem	Cheak These Items
Image is unstable, unfocused or swimming is apparent	- Signal cable should be completely attached to the computer. - Use the OSM Image Adjust controls to focus and adjust display by increasing or decreasing the Fine Control. When the display mode is changed, the OSM Image Adjust settings may need to be re-adjusted. - Check the monitor and your display card with respect to compatibility and recommended signal timings. - If your text is garbled, change the video mode to non - interlace and use 60Hz refresh rate.
LED on monitor is not lit (no green or amber colour can be seen)	- Power Switch should be in the ON position and power cord should be connected. - Make certain the computer is not in a power-saving mode (touch the keyboard or mouse).
Display image has a green cast to it	Select "TYPE" in the OSM Information menu  and press the ◀ or ▶ Control button.
Display image is not sized properly	- Use the OSM Image Adjust controls to increase or decrease the H. Size. - Check to make sure that a supported mode and signal timing has been selected on the display card or system being used. (Please consult display card or system manual to change graphics mode or refresh rate.)
Selected resolution is not displayed properly	Select the Display Resolution in the OSM Information menu  confirm that the appropriate resolution has been selected. If not, select corresponding option. by pressing the ◀ or ▶ Control button.

